


SKT

SMART KITCHEN TIMER USER GUIDE



Model: T-2268

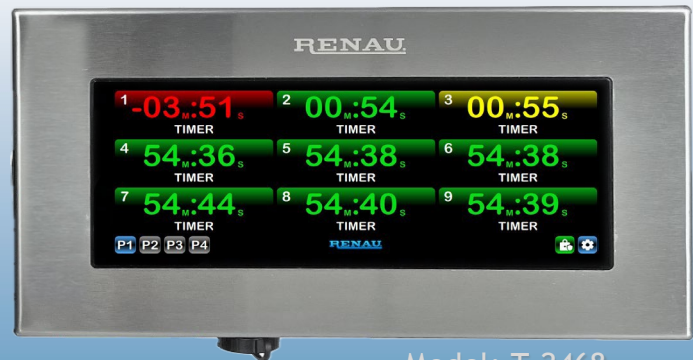

Model: T-2468



Model: T-2411

Images are not actual size

SKT MODELS FEATURES:

6.8" Touchscreen - T-2268 / T-2468

10.25" Touchscreen - T-2411

RENAU

RENAU

PLEASE READ THE FOLLOWING CONTENT

Caution:

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Tested to comply with FCC standards commercial use. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CE Conformity Products bearing the CE marking comply with one or more of the following EU Directives as may be applicable:

Renau is not liable for any use of product not in accordance with Renau's installation and operating instructions. Before using this equipment, or for any questions regarding the operation of the appliance, consult and follow all instructions and safety warnings found in the appliance operator's manual supplied from the appliance manufacturer.

Important Safety and Usage Warnings

- Power Supply:** Only use genuine Renau 5V/2A power supplies with the SKT. Using unapproved power supplies may damage the device, pose a safety hazard, and void the warranty.
- USB Ports:** The USB port for the SKT is compatible with all major brands of flash drives in the FAT32 format. Do not plug anything except for Renau approved devices into the USB port, including phone chargers, as this will damage the product and void the warranty.
- Cleaning the Screen:** Clean the SKT screen only with a soft, damp cloth with a mild, pH-neutral plastic-safe detergent. Do not use harsh detergents, solvents, or abrasive materials (such as those containing d-Limonene, alcohols, or ammonia), as they can damage the screen and void the warranty.

About This Guide

The following pages are a guide to set up the Smart Kitchen Timer (SKT).

In order to get the best experience with your SKT, please follow this user guide before using your device. Before using this guide ensure that you read and understand the following:

Safety and Warranty Information **General Safety and Compliance Notice** **Hardware Installation Instructions**

For more information on SKT models and other products, see www.renau.com.

Regulatory Notices

RED 2014/53/EU; Low Voltage Directive 2014/35/EU;
EMC Directive 2014/30/EU; RoHS Directive 2011/65/EU.

This device meets the emission and immunity requirements of PN-EN IEC 55014-1: 2021 on the EU market.

Compliance with these directives is assessed using applicable European Harmonized Standards.

Specifications are subject to change without notice. The products manufactured by RENAУ are protected under one or more of the following U.S. Patents: 6,850,850 6,816,670 6,636,772 6,546,944 6,214,239 5,835,993 4,943,706 4,849,098 and other patents pending.

Designed and manufactured in the U.S.A.

TABLE OF CONTENTS

GENERAL SAFETY & COMPLIANCE	2
REGULATORY	3
About This Guide	3
OVERVIEW OF MODELS	5
T-2268 6.8" Touchscreen	5
T-2468 6.8" Touchscreen	6
T-2411 10.25" Touchscreen	7
INITIAL SETUP	8
Programming Screen Layout.....	8
Programming Screen Layout ...continued	9
Programming Screen Layout ...continued	10
Programming Tile.....	11
Tile Settings	11
CUSTOMIZING TIMER TAB	12
Tile Name and Time	12
Repeat Function.....	12
Duty Cycles.....	13
Grouping	13
SETTINGS	14
Device Info	14
Firmware Upgrade	15
Display Setting	15
Sound Setting.....	16
Change Pin	16
Language Setting.....	17
Import / Export.....	17
Factory Reset.....	17
Warranty & Support	Visit www.renau.com for related manuals and documentation

OVERVIEW OF MODELS

T-2268 6.8" Touchscreen



*USB Port



*Stainless Steel Mounting Bracket




*5VDC Power Connector



**USB Port*



**Stainless Steel Mounting Bracket & Case*

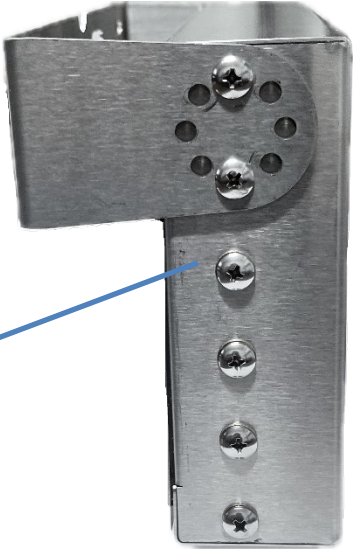


**5VDC Power Connector*



*USB Port



*Stainless Steel Mounting Bracket & Case

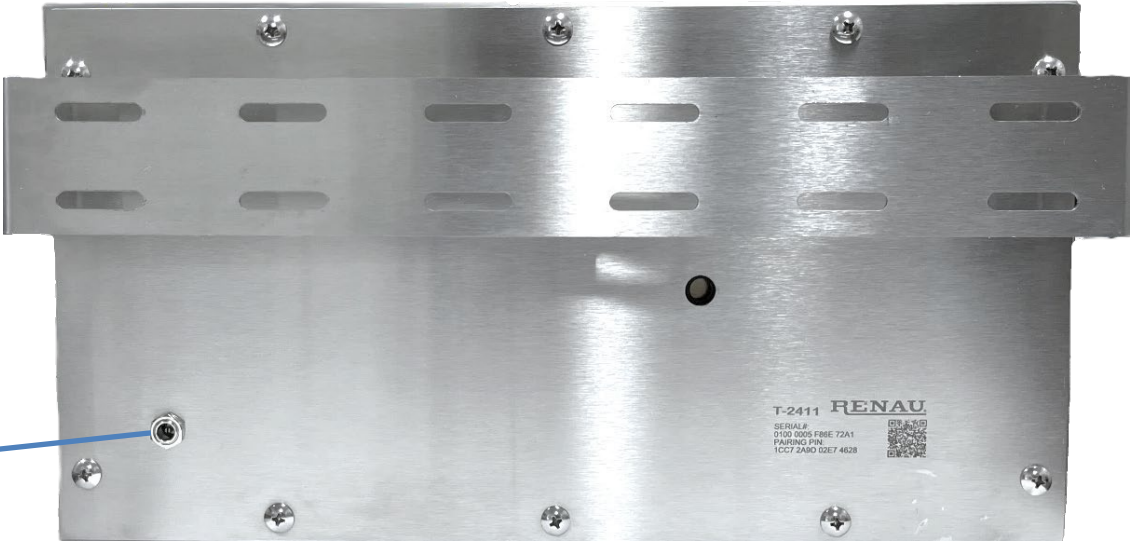

*5VDC Power Connector

T-2411 RENAU
SERIAL # 0120 0005 F88E 72A1
PAIRING PIN: 88888888
1CC7 2A9D 52E7 4628



Programming Screen Layout

1. Connect the unit to a power source. Once powered **ON**, the Renau logo will appear on the display, accompanied by an audible buzzer, indicating that the timer is **ON**.



Note: Make sure power supply is inserted completely.

Locked screen icons

-  Programming access
-  Settings





2. Unlocked screen / Setting options require pin access.

- Enter 4-digit PIN
(Default is 4444)



Note: To change pin refer to Settings pg.14.

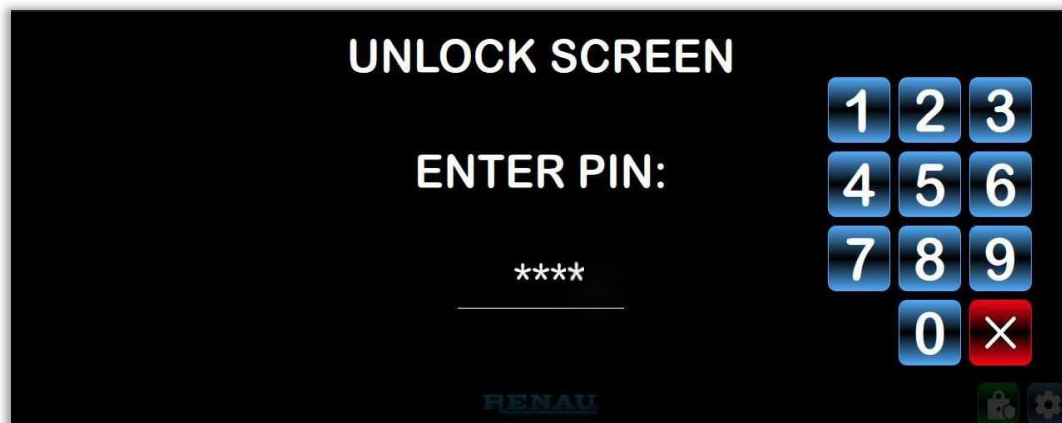

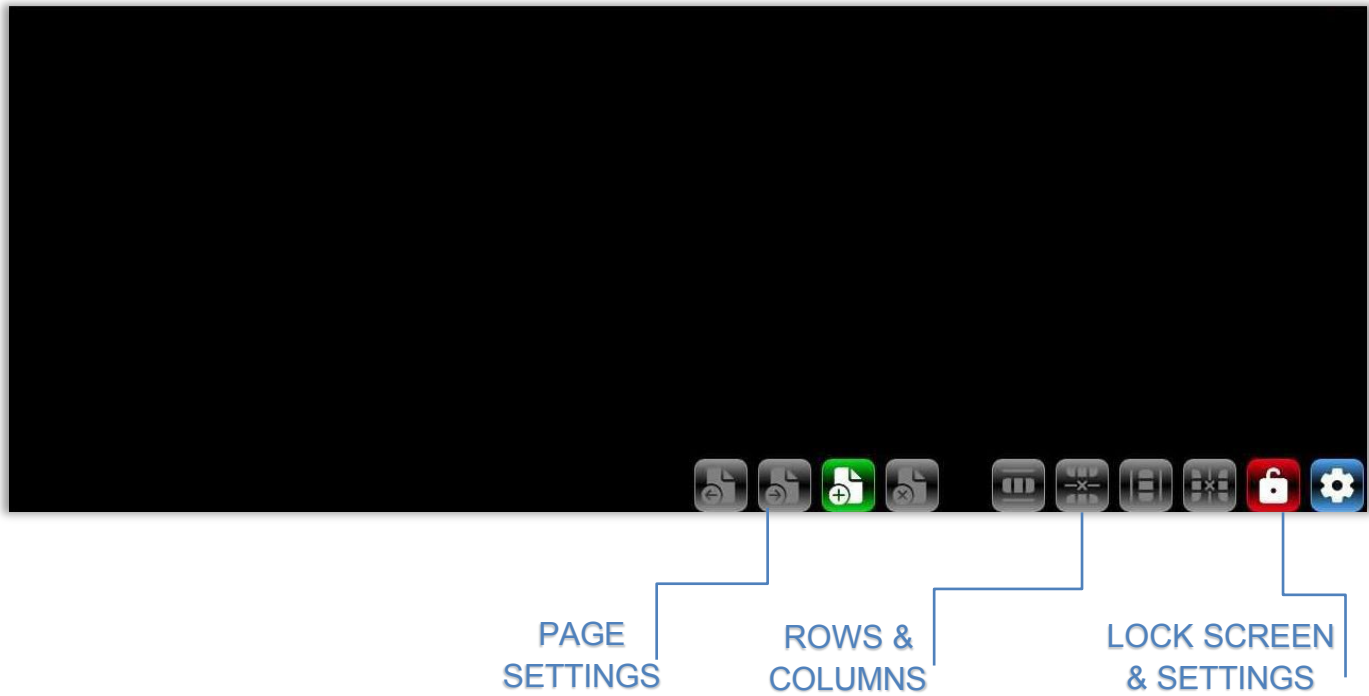


3. Select :

-  To add pages

 Note: Add up to 6 pages



-  Swipe left or right to switch between pages

-  Single press to delete page



- Select **YES** or **NO** when the screen prompts for confirmation.









(ROWS & COLUMNS)

4. Select:

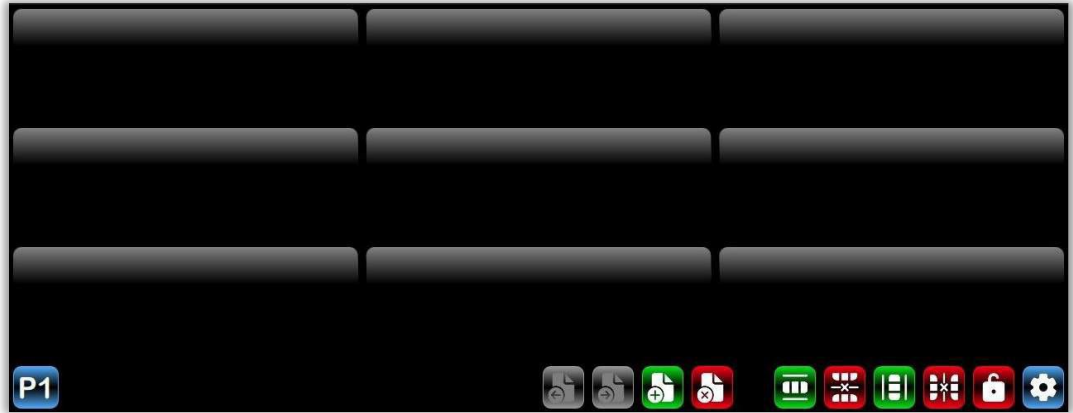-  To Add rows
-  To add columns





 **Note:** Add up to 4 rows & columns


5. Single press  or  to delete rows and columns.

- Select **YES** or **NO** when the screen prompts for confirmation.




-  Select unlocked icon once you have customized timer to your needs refer to pgs.11-13.


 **Note:** Timer will not start unless unlocked icon is pressed

-  For setting icons description refer to pg.12.


Programming Tile

1. Press  to begin customizing timer.

2. Select tile  again to start editing.

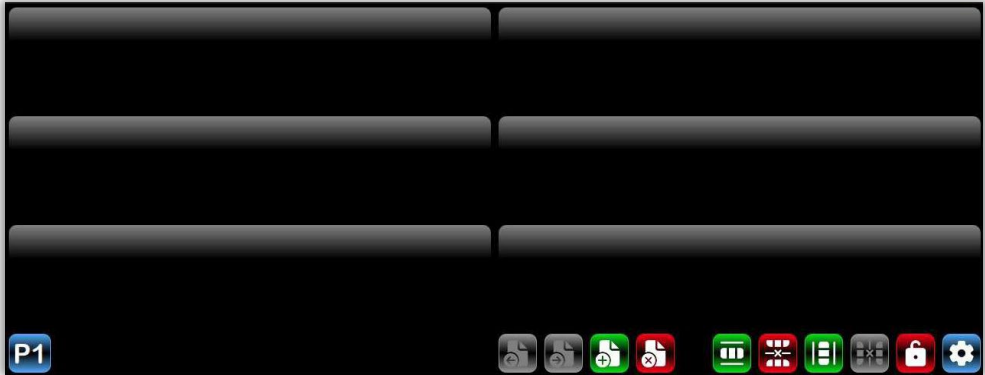

Tile Settings

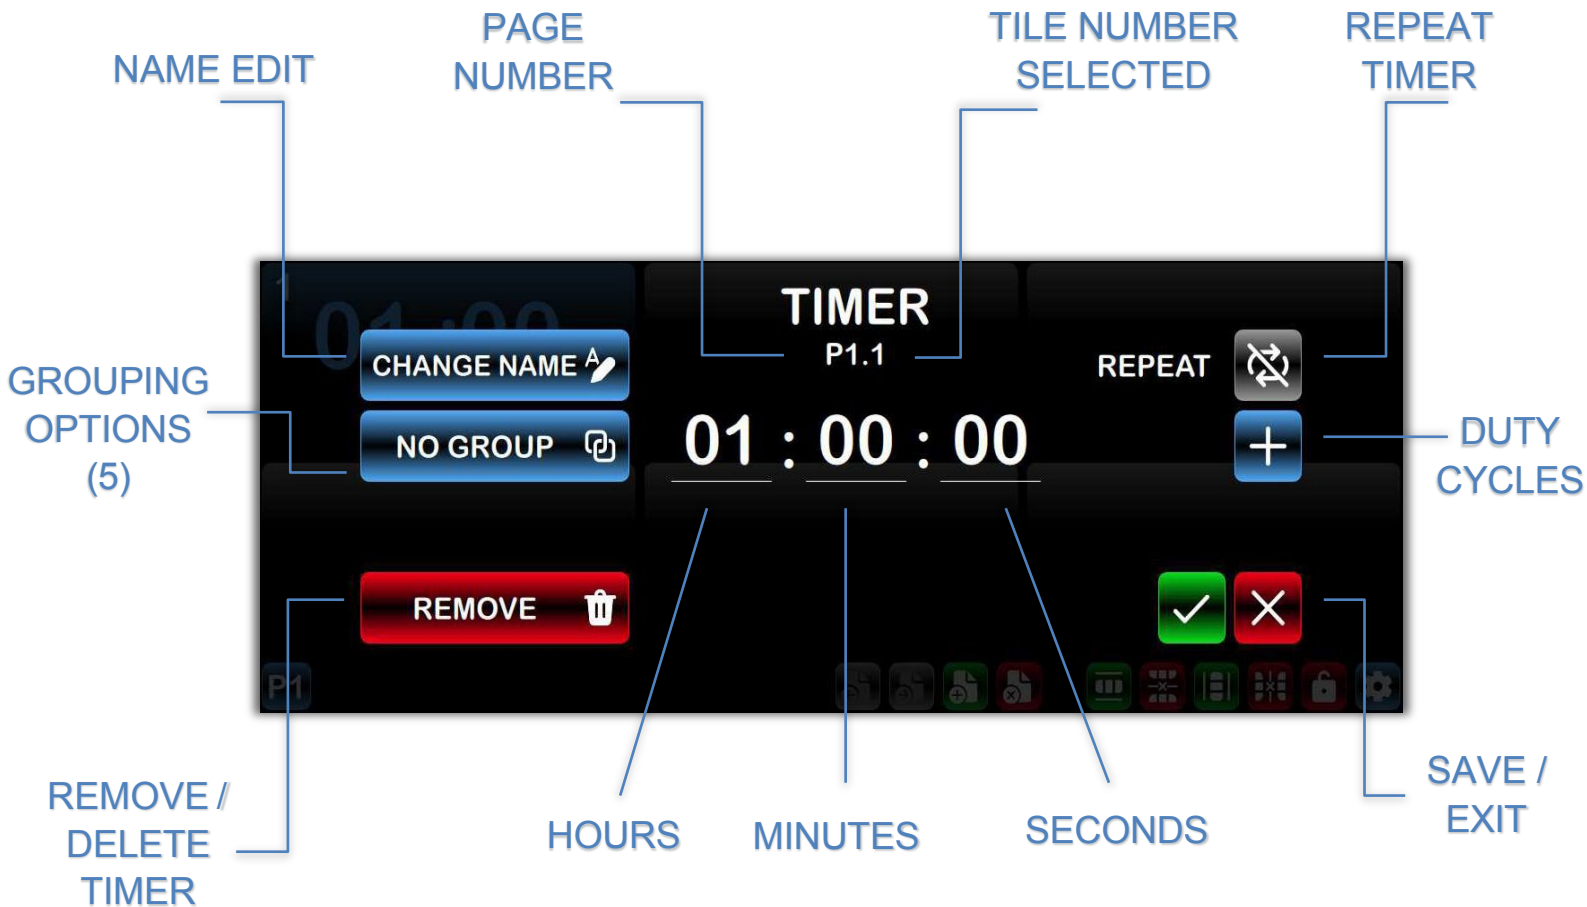

CUSTOMIZING TIMER TAB

Tile Name and Time

1. Edit **NAME** by selecting:

CHANGE NAME 

2. Select  to save **NAME**.



3. Edit **TIME** by pressing the number lines.

4. Select  to save **TIME**.



Repeat Function

1.  Enables **REPEAT TIMER** control:

Single press resets the timer / Single press stops timer



2.  Disables **REPEAT TIMER** control :

Press and hold again to reset timer / Press and hold to stop timer




Duty Cycles

1. Create **Duty Cycles** (3x) by pressing:



2. Duty cycles suggestions are as followed :

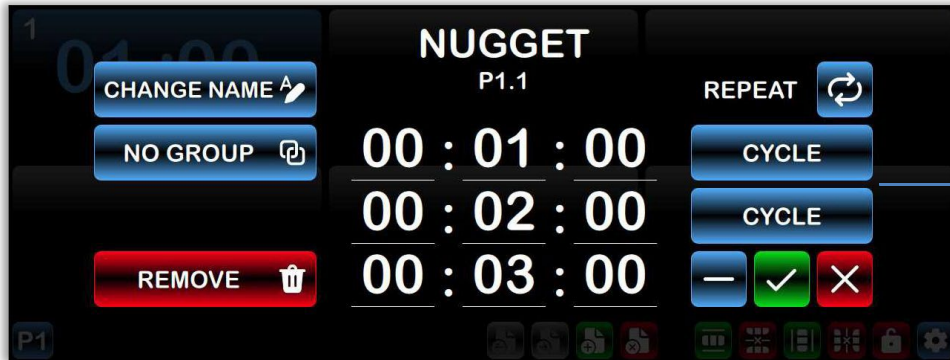


3. Select  to save **DUTY CYCLE** chosen.

4. Display will read out **DUTY CYCLE** , press the tile to continue to next cycle or final timer .



Grouping

1. Select  to combine timers you will like to **GROUP** together.

 *Note: Add up to 5 groups*




2. Lock in your final edited tile by pressing lock icon.



3. Press timer tile to **START**.




Setting Icons

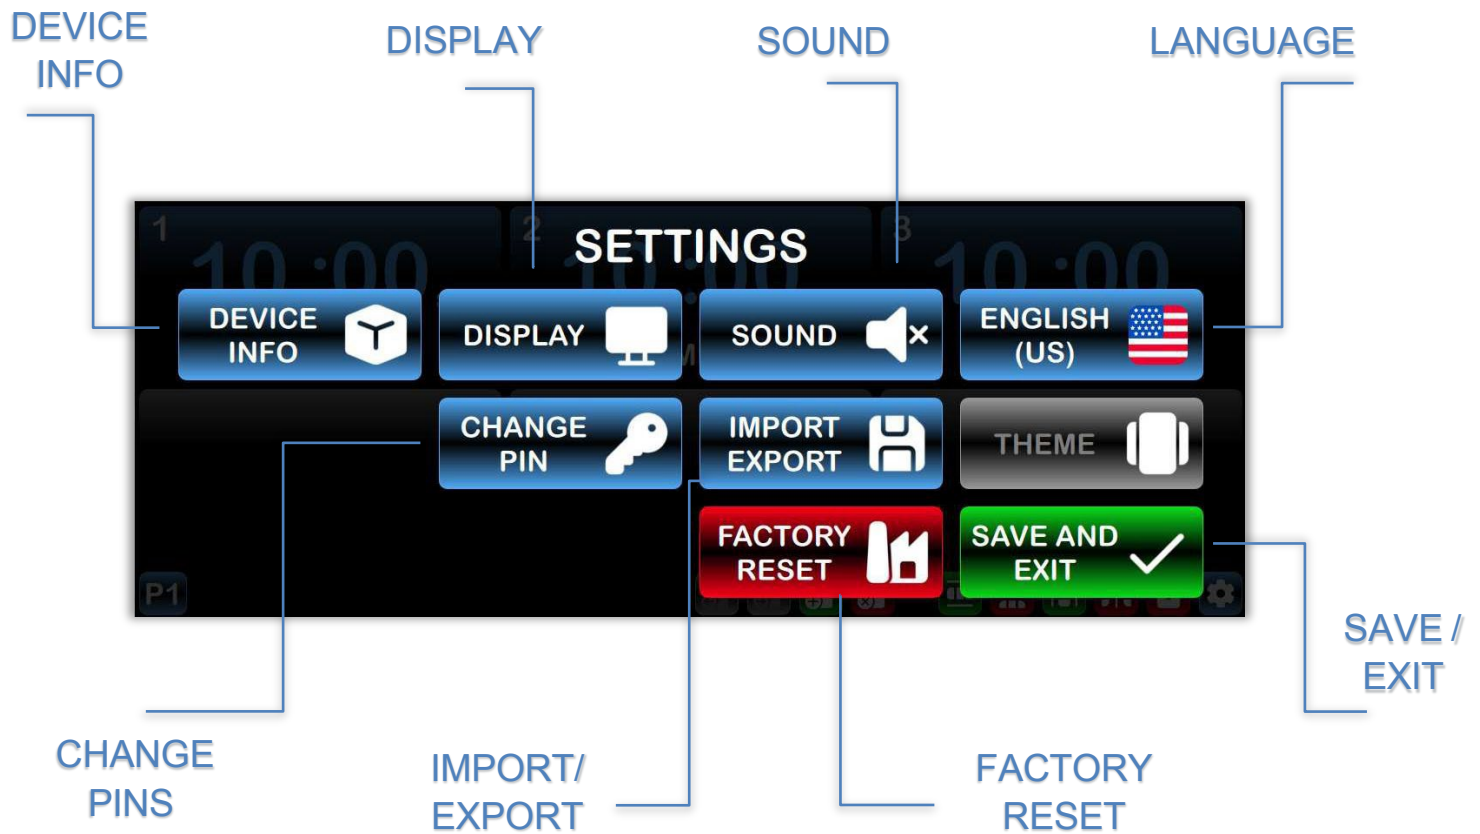

Device Info


1. Select  for your timer's information **DEVICE FIRMWARE** and **SERIAL NUMBER**.

2. For an upgrade on **FIRMWARE** select **UPGRADE** and follow firmware upgrade directions on pg.15.

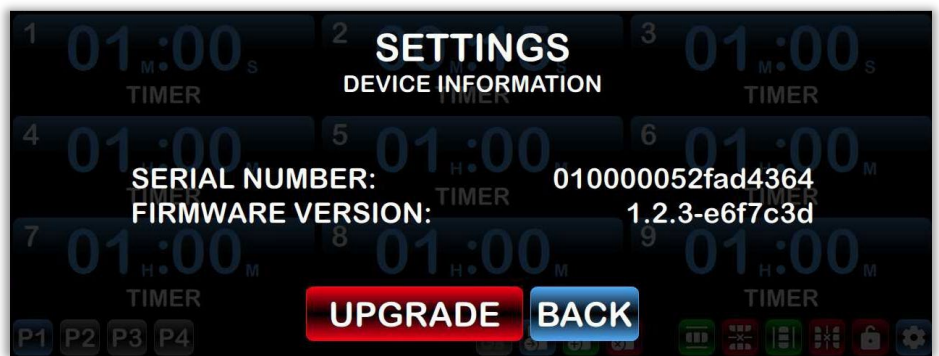


Firmware Upgrade

1. After selecting **UPGRADE** insert USB drive with new programming as shown.

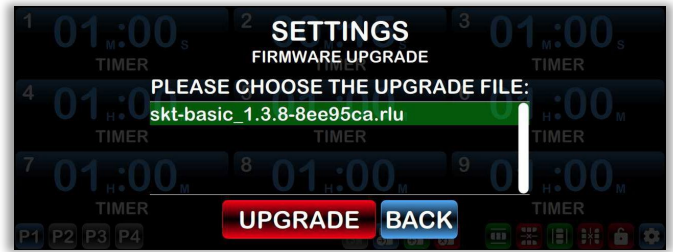

 

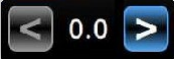 
2. Timers' system will automatically configure during the upgrade a notification will appear once the upgrade is complete.

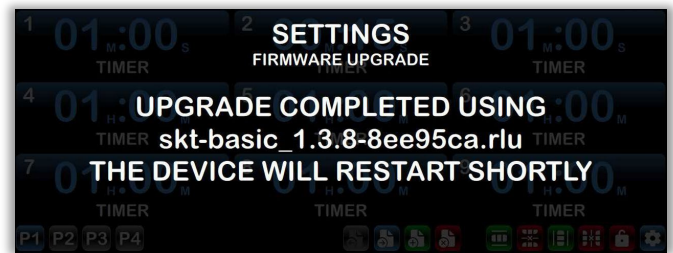


3. Timer will restart and will be ready to use.


Display Setting

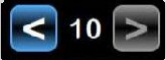



1. Select  to open the display settings:

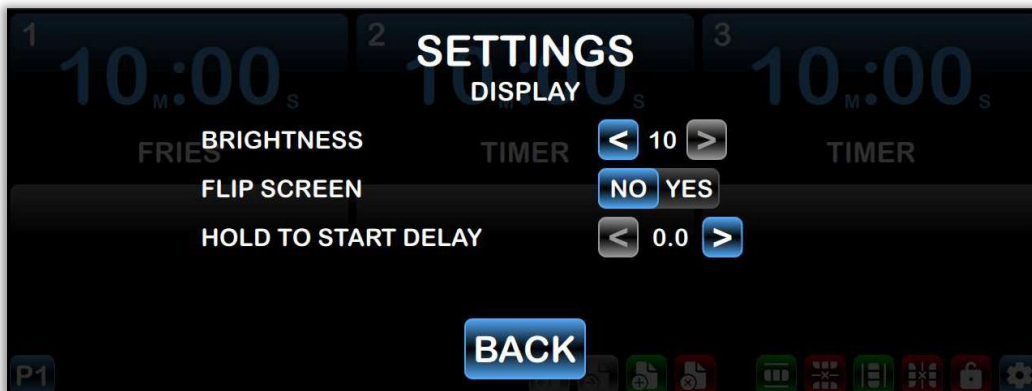
-  **BRIGHTNESS** – adjust how bright or dim the screen will be.
-  **FLIP SCREEN** – rotate or mirror the screen display.
-  **DELAY** – add or remove a delay (in seconds) before tile activation.



Sound Setting

  1. Select  to open the sound settings:

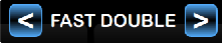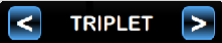-  **VOLUME LEVEL** – adjust how loud or soft the sound will be.
-  **SOUND ON TOUCH** – enable or disable sounds when you tap the screen.
-  **BEEP PATTERN** – choose the beep style (single, double, continuous).
-  **DUTY CYCLE BEEP PATTERN** – set how frequently the beep pattern repeats.

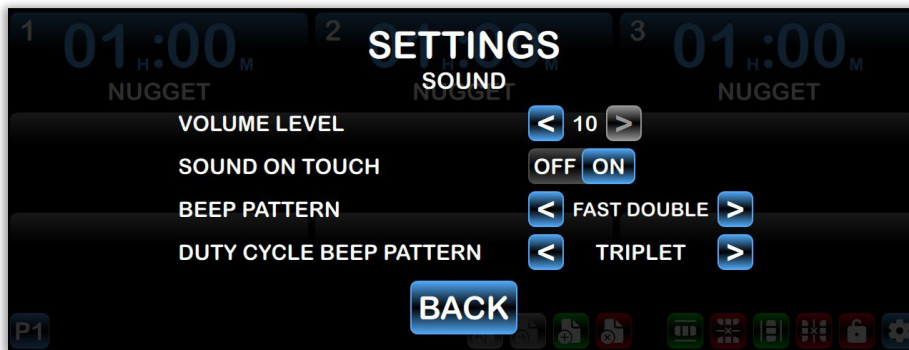


Change Pin

1. Select  to change your PIN.

2. Follow the instructions:

- Enter your **CURRENT PIN**
- Then enter your **NEW PIN** (twice to confirm)

3. Your new pin will be saved automatically.

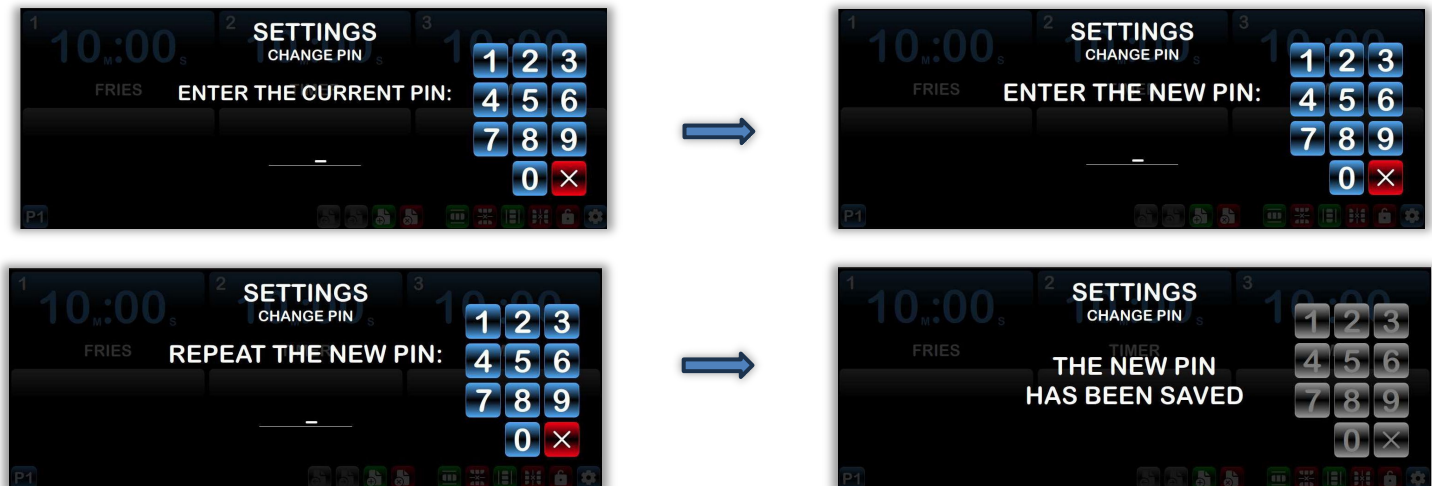


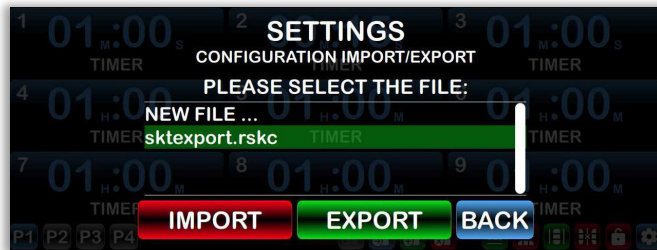
Language Setting


1. Press the English (US) icon to change language settings
you'll see the following available languages:



Import / Export


1. Select  to **IMPORT / EXPORT** configurations using a USB drive.
2. Select file to **IMPORT**.




3. Select .
4. Completion will be shown in display when finished.



Factory Reset

1. Select  to access reset options choose from two options:
 - **DATA RESET** – deletes saved data only.
 - **HARD RESET** – deletes all data and all updates.
(*PIN CODE* will be required to confirm hard reset)

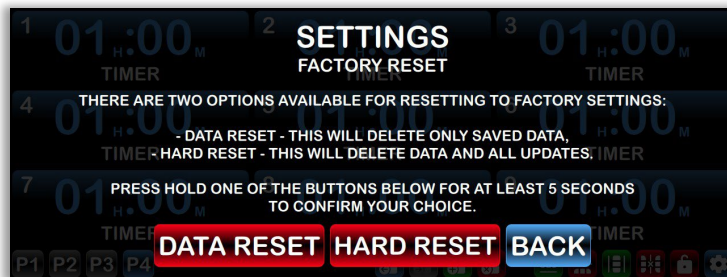

 Note: Select  to save any setting changes